

# EL PRIMA EXP



## QUICK START GUIDE


*Victoria Arduino*  
INSPIRED BY YOUR PASSION.

  
ZUCCARINI  
EST 1954

# FIRST INSTALLATION


## MACHINE ON/OFF

Press the ON/OFF switch found on the bottom right of the device.

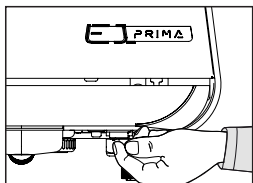


## STANDBY

Press and hold button 1B for 5 seconds to activate the machine from standby mode.

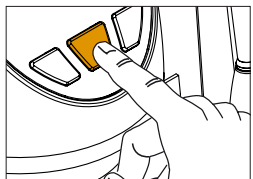


## SWITCH BETWEEN TANK AND DIRECT CONNECTION

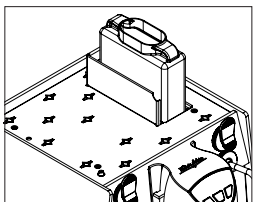


The machine arrives in tank mode. To change it to direct connection, follow the steps:

1. Turn off the machine from the main switch.

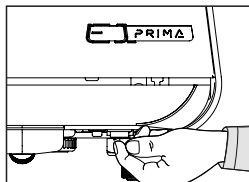

2. press and hold together the 1A and 1C buttons at the same time you turn on the machine from the ON/OFF switch.

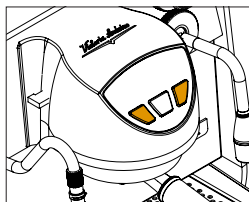

The tank icon will flash for 3 times, signaling the change from tank to direct connection mode;




3. Turn off the machine from the main switch;

## FILLING OF THE COFFEE BOILER


The machine will go into the following mode:

1. Display showing 'FI'
2. Fast flashing of the keyboard keys

This means the machine is ready to run the one-time procedure to refill the coffee boiler.

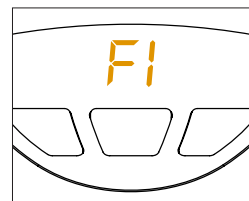

Wait until the keyboard LEDs start flashing more slowly. To activate the refill boiler procedure, press and hold together the 1A and 1C buttons until the system is engaged (the pump starts to run).

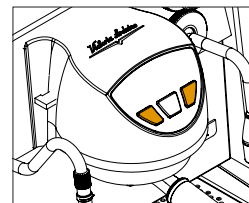

# PROGRAMMING

## MENU NAVIGATION

El Prima EXP has two different brewing methods: Espresso and PureBrew. Switch from E mode (espresso) to P mode (PureBrew) to program temperature and doses of each brewing method.

Before starting the programming check the brewing mode pressing together button 1A and 1B. The display will show P mode (purebrew). If the display will show you the 'E' (espresso) string, please press and hold 1A button for 5 seconds to switch to P mode.

The menu is composed of:


- Cleaning
- Temperature
- Profiles (Pure Brew setting only)
- Doses




### NOTE:

Press and hold the 1A and 1C buttons for 5 seconds, to enter the first level programming menu. Access is confirmed when the LED light of buttons 1B start flashing.

## PUREBREW PROGRAMMING

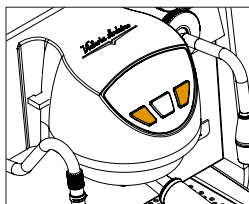

### 1. PURE BREW TEMPERATURE

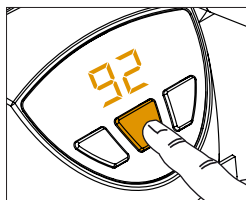

To enter the programming menu, keep 1A and 1C pressed for 5 seconds. The LED light on 1B will start to flash. The display will show the set temperature. Press 1A and 1C to reduce or increase the temperature.

Press 1B to confirm and continue with programming (otherwise press 1B three times to exit from programming).

### 2. PURE BREW PROFILE

The display visualizes three lines indicating the different Pure Brew profiles (1B will continue to flash). Press 1A and 1C to set the desired profile

- I --> LIGHT
- II --> MEDIUM
- III --> DARK

Press 1B to confirm and continue with programming (otherwise press 1B twice to exit from programming).



### 3. PURE BREW DOSES

The display will show the message "dS" and 1B will continue to flash.

Press 1A to start dispensing.




The display will show the message "dS" and 1B will continue to flash.

Press 1A to start dispensing.

The pressed button will stay on and the dispensing time (in seconds) will be visualized on the display. Press 1A again to stop dispensing. If you want to save this dose, press 1B to exit, otherwise proceed with the dose setting of 1C. The procedure is the same as used for 1A.


1B is for continuous mode.

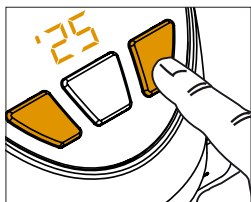

#### **ATTENTION :**

When the doses are programmed in Pure Brew mode, the first phase is prewetting followed by a pause. After the pause the brewing (Phase Pure 1) will start. If this phase is not reached, the dosage will not be saved.


## **ESPRESSO PROGRAMMING**

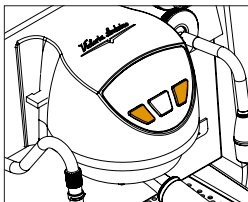

### **1. ESPRESSO TEMPERATURE**

Keep 1A and 1C pressed for 5 seconds to enter the programming menu, the 1B LED light will start to flash. The display will show the set temperature. Press 1A and 1C to reduce or increase the temperature.

Press 1B to confirm and continue with programming (otherwise press 1B twice to exit from programming).

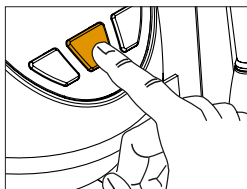

### **2. ESPRESSO DOSES**

The display will show the message "dS" and 1B will continue to flash.

Press 1A to start dispensing.

The pressed button will stay on and the dispensing time (in seconds) will be visualized on the display. Press 1A again to stop dispensing.

The display will show the message "dS" and 1B will continue to flash.

Press 1A to start dispensing.

The pressed button will stay on and the dispensing time (in seconds) will be visualized on the display. Press 1A again to stop dispensing. If you want to save this dose, press 1B to exit, otherwise proceed with the dose setting of 1C. The procedure is the same as used for 1A.

1B is for continuous mode.



# CLEANING

# HOT WATER

## CLEANING PROGRAMMING

Cleaning is the first entry in the menu for both models.




If the machine is set to tank mode, fill the tank, otherwise move on to the next point. Replace the filter with the blind filter for the dispensing group and put in the dose recommended by the manufacturer of the specific powdered detergent. Then insert the portafilter into the group.

Keep 1A and 1C pressed for 5 seconds to enter the programming menu. The display will visualize the message "cl", 1B will start to flash and 1C will stay constantly lit.

Press 1C to start the washing cycle. The button will start to flash quickly. Once the washing cycle is complete, the machine will stop and the LED on button 1C will stay lit. Press 1C to start the rinsing phase. The button will flash more slowly.

At the end of the procedure, replace the blind filter with the normal filter and go back to normal operations.


Keep 1A and 1C pressed for 5 seconds to enter the programming menu, the 1B LED light will start to flash. Press 1B to scroll through the menu until "dS" is visualized on the display.

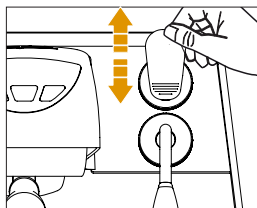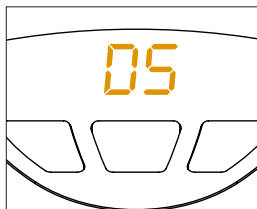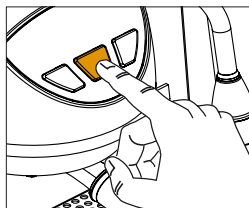

Programming starts by moving the relative lever.

PRESS THE UPPER PART OF THE LEVER TO SET THE FIRST DOSE OF HOT WATER (KEY 1).

PRESS THE LOWER PART OF THE LEVER TO SET THE SECOND DOSE OF HOT WATER (KEY 2).

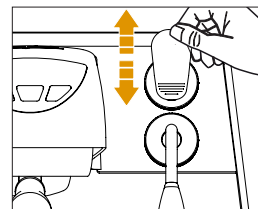

If there is no need to program, press the central button to exit the programming menu. After 15 seconds of no button use, it will automatically dismiss.

# E1 P R I M A EXP



## ESPRESSO MACHINES

NO. 1335 DAVENPORT ROAD  
TORONTO, ONTARIO M6H 2H4

416-537-3439

hello@zuccarini.ca  
ZUCCARINI.CA

Simonelli Group | Via E. Betti, 1 | 62020 Belforte del Chienti (MC) | Italy  
T +39 0733 9501 | F +39 0733 950242 | info@victoriaarduino.com

[www.victoriaarduino.com/eagleoneprima](http://www.victoriaarduino.com/eagleoneprima)



INSPIRED BY YOUR PASSION.

EAGLE ONE PRIMA EXP | QUICK START GUIDE

E1 P R I M A EXP

